

John C. Stennis Space Center

Commercial Technology Program



NASA John C. Stennis Space Center

PITTCON 2002 New Product Forum March 17, 2002

Presented by:

Licensing/Partnership Opportunities Radiometer Technologies

John C. Stennis Space Center

Commercial Technology Program



Radiant Temperature Nulling Radiometer

(NASA Stennis Case Number: SSC-00124)

Polarization Enhanced Thermal Radiometer

(NASA Stennis Case Number: SSC-00134)

Technology Background



John C. Stennis Space Center



- NASA and other government agencies routinely calibrate thermal remote sensing satellites and airborne imaging systems by measuring water body temperatures
- Temperature measurements approaching 0.1 °C accuracy are required
- Existing technologies are extremely power hungry, drift over time, do not allow for continuous monitoring, and are subject to complex atmospheric correction

NASA Relevance



John C. Stennis Space Center



- Remote monitoring of the temperature of water bodies
- Improved calibration of thermal imaging systems
- Ground truth for thermal applications
 - Handheld infrared thermometer
- Expected further support



John C. Stennis Space Center

Commercial Technology Program



Radiant Temperature Nulling Radiometer

(NASA Stennis Case Number: SSC-00124)



Nulling Radiometer

John C. Stennis Space Center



- Using a controllable thermal source and a infrared thermometer a very accurate and stable thermometer can be achieved
- Intrinsically self calibrating
- Low Power

Research & Development Status



John C. Stennis Space Center




- Development stage
 - Design Stage
 - General radiometer is designed
 - Critical electromechanical subsystems have been prototyped
- Development hurdles
 - Full integration and packaging

Nulling Radiometer Principles



John C. Stennis Space Center



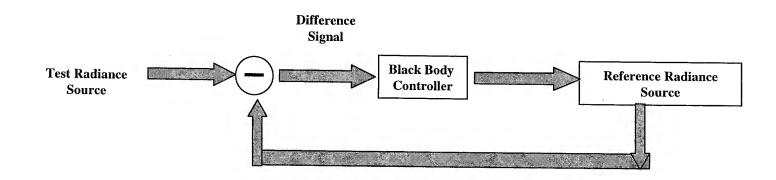


Nulling Radiometer Subsystems




John C. Stennis Space Center



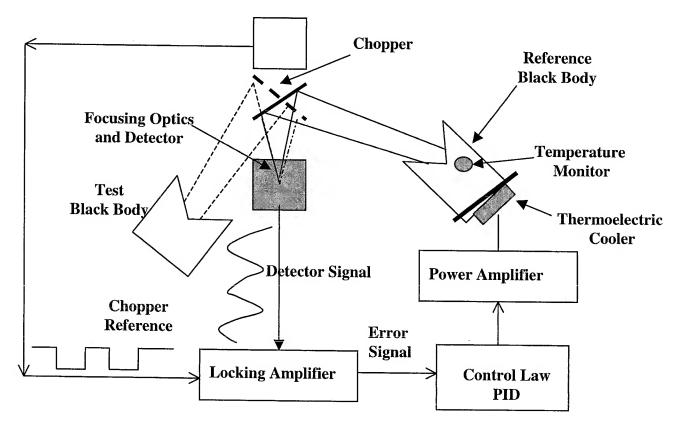

Nulling Radiometer Chopper



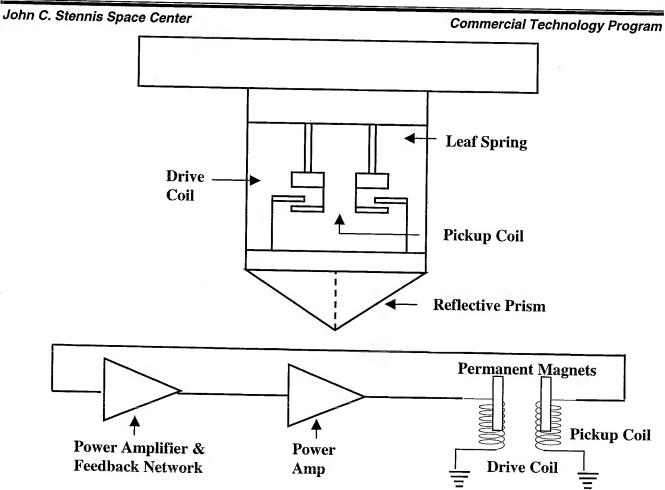





Nulling Radiometer Chopper (cont)

John C. Stennis Space Center




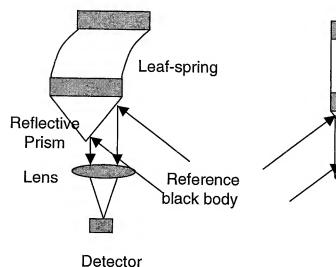

a) Reference black body only

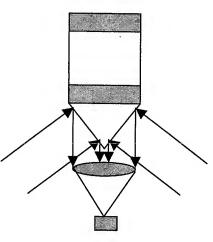

b) Both reference and test infrared source only

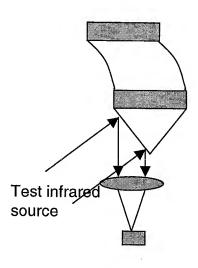


c) Test infrared source only




Nulling Radiometer Hardware

John C. Stennis Space Center



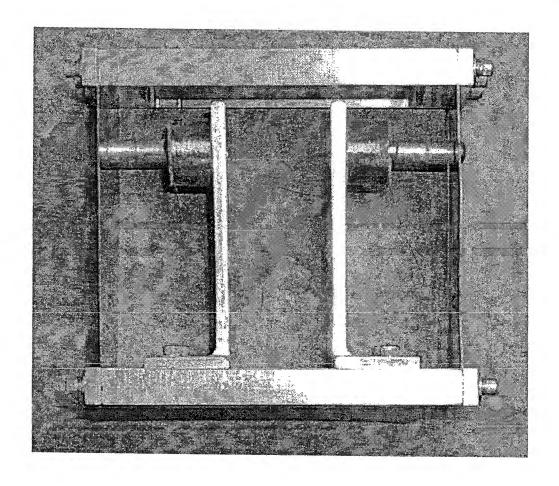

Technical Advantages of the Nulling Radiometer





- Requires only a single calibration source near the temperature of the test object
- Novel low power electromechanical optical chopper
- Self calibrating
- Faster time response and lower power than other accurate and stable systems
- Continuous monitoring
 - High duty cycle
- Low power
- Temperature accuracies on the order 0.1 °C are achievable



Commercial Technology Program



Polarization Enhanced Thermal Radiometer

(NASA Stennis Case Number: SSC-00134)

Brewster Angle Radiometer



John C. Stennis Space Center



- Measures polarized infrared emission at the Brewster angle where the emissivity of the surface is unity
- Improves overall temperature accuracy of infrared thermometer for weakly absorbing dielectrics by eliminating stray sources

Research & Development Status



John C. Stennis Space Center



- Modeling of the phenomena has been made along with sensitivity to design parameters
- Laboratory proof of concept has been made Development hurdles
 - Full integration and packaging


Theory of Operation







Commercial Technology Program



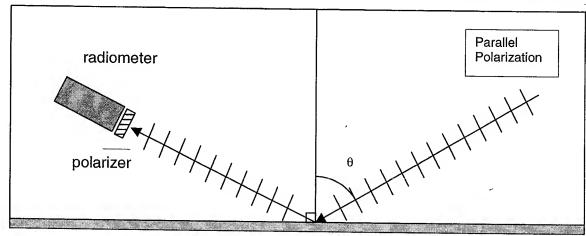

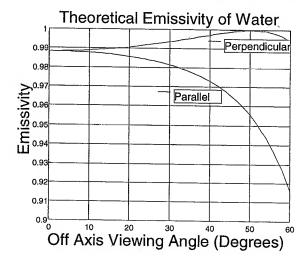

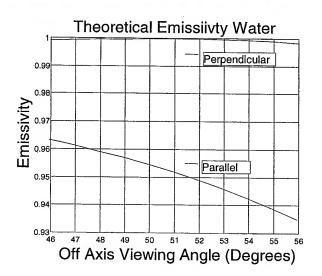

March 17, 2002

NASA PROPERTY – FOR INFORMATIONAL PURPOSES ONLY


Experimental Approach



John C. Stennis Space Center

Commercial Technology Program



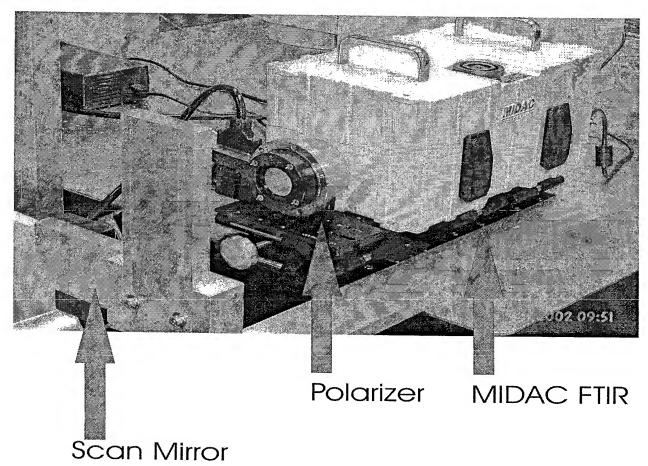

March 17, 2002


NASA PROPERTY – FOR INFORMATIONAL PURPOSES ONLY


Perpendicular Polarization



John C. Stennis Space Center



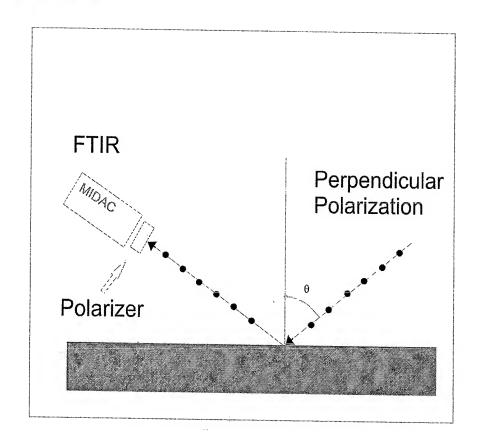

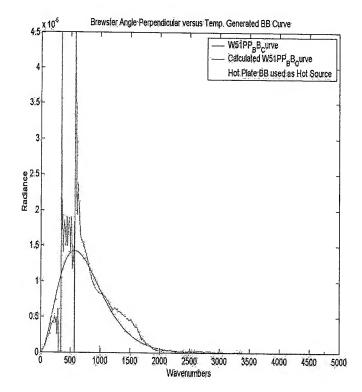



Parallel Polarization



John C. Stennis Space Center



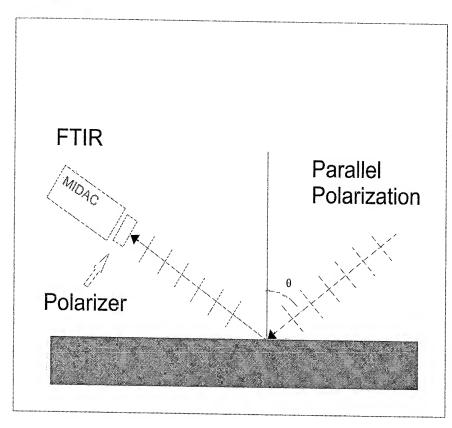

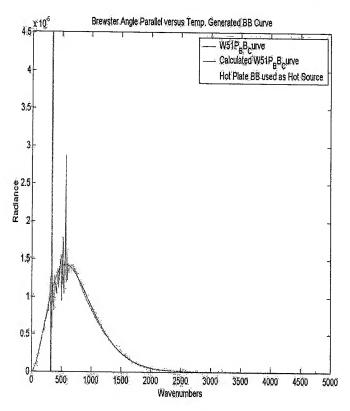

Note Excellent Agreement in Atmospheric Window


Technical Advantages of the Brewster Angle Radiometer





- Polarized thermal radiometer at Brewster angle eliminates the need for complex corrections for emissivity and surroundings
- Temperature accuracies on the order of 0.1 °C are achievable
- Simple to implement
- Minimal modeling necessary to determine temperature
- Easy to calibrate

Remaining Research & Development for Both Technologies





- Technical risk
 - Low cost polarizer (Nulling Radiometer)
 - Low (Brewster Angle Radiometer)
- Remaining milestones
 - Full integration (Both Technologies)
- Future enhancements
 - Combination of technologies into one package
- Need for outside expertise or resources
 - Outside packaging expertise needed

Technology Benefits for Both Technologies

John C. Stennis Space Center




- Both technologies minimizes calibration needs
- Both technologies improves accuracy
- Nulling Radiometer increases utility in harsh thermal environments
- Nulling Radiometer reduces human intervention
- Nulling Radiometer Low Power Requirement
- Brewster Angle Radiometer decreases complexity of measurement
- Brewster Angle Radiometers ease of integration into existing radiometers

Potential Applications for Both Technologies

John C. Stennis Space Center

Commercial Technology Program



- NASA and NOAA satellite calibration
- Department of Defense Applications
- Global Warming

Process Control

- Chemical/petrochemical
- Power Generation
- Aerospace
- Materials
- Infrared radiometers for weakly absorbing dielectrics
 - Water
 - Polymers

NASA Plans/Options



John C. Stennis Space Center



- Continued internal development of both technologies
- Partnering
 - Dual Use Technology Development
 - Interagency Partnering
- License Technology for Commercialization

Intellectual Property



John C. Stennis Space Center



- Patent Pending
 - NASA has filed a Patent Application on both technologies
- NASA has the authority to license the technologies pursuant to 35 USC 207-209
- NASA has the authority to grant Exclusive, Partially Exclusive, or Nonexclusive licenses on both technologies

Licensing Opportunity



John C. Stennis Space Center

Commercial Technology Program



• Parties interested in licensing this technology or partnering with NASA for further development should contact the Commercial Technology Program at John C. Stennis Space Center at:

Phone: (228) 688-1929

E-mail: technology@ssc.nasa.gov

http://technology.ssc.nasa.gov

Reference Technology Case Numbers:

SSC-00124, Radiant Temperature Nulling Radiometer

SSC-00134, Polarization Enhanced Thermal Radiometer

OR

While at PITTCON come see us at booth number 5619



John C. Stennis Space Center

Commercial Technology Program



THANK YOU

Questions?

REPORT DOCUMENTATION PAGE			Form Approved OMB No. 0704-0188	
PLEASE DO NOT RETURN YOUR FORM T	O THE ABOVE ADDRESS.	esponse, including to ection of information to Department of Do Arlington, VA 222 comply with a colle	the time for reviewing instructions, searching existing n. Send comments regarding this burden estimate or efense, Washington Headquarters Services, Directorate 02-4302. Respondents should be aware that ction of information if it does not display a currently	
1. REPORT DATE (DD-MM-YYYY) 17-03-2002	2. REPORT TYPE		3. DATES COVERED (From - To)	
4. TITLE AND SUBTITLE PITTCON 2002 New Technology Forum Radiant Temperature Nulling Radiometer Polarization Enhanced Thermal Radiometer		5a. CONTRACT NUMBER		
		5b. GRANT NUMBER		
		5c. PROGRAM ELEMENT NUMBER		
6. AUTHOR(S)		5d. PRO	5d. PROJECT NUMBER	
		j		
		5e. TASK NUMBER		
		5f. WORK	5f. WORK UNIT NUMBER	
7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES) Office of Technology Transfer			8. PERFORMING ORGANIZATION REPORT NUMBER	
			SE-2002-03-00016-SSC	
			10. SPONSORING/MONITOR'S ACRONYM(S)	
		11. SPONSORING/MONITORING REPORT NUMBER		
12. DISTRIBUTION/AVAILABILITY STA	FEMENT			
Publicly Availability STI per form 1	676			
13. SUPPLEMENTARY NOTES Conference PITTCON 2002				
14. ABSTRACT				